

REVUE

RVU-3FTXDP AND RVU-4FTXDP WALL MOUNT WINE RACK INSTRUCTIONS:

EACH RVU-3FTXDP OR RVU-4FTXDP CONTAINS:

- 1 PUNT RACK
- 1 NECK RACK

BEFORE STARTING, OPEN ALL PACKAGING AND TAKE INVENTORY TO MAKE SURE YOU HAVE EVERYTHING.

TOOLS NEEDED :

- 1 SPIRIT LEVEL
 - 1 TAPE MEASURE
 - 1 SCREWDRIVER
 - 1 MARKING PEN OR PENCIL
 - DRILL AND DRILL BITS (NECESSARY IN SOME CASES)
-

FASTENERS:


THERE ARE PRE-DRILLED MOUNTING HOLES IN EACH STRIP. APPROPRIATE FASTENERS MUST BE UTILIZED IN EVERY MOUNTING HOLE FOR PROPER INSTALLATION. FASTENERS ARE NOT INCLUDED WITH THE REVUE RACK. HOWEVER, WE RECOMMEND THE FOLLOWING FASTENERS FOR THESE SURFACES.

- WOOD SURFACE: #8 x 1-1/4" WOOD SCREW
 - DRYWALL/WALLBOARD SURFACE: #8 x 1-1/4" SCREW WITH SPIRAL INSERTS FOR THE BOTTOM TWO HOLES IN EACH STRIP (4 TOTAL) AND AN EXPANDING HOLLOW WALL ANCHOR SUCH AS A TOGGLE BOLT FOR THE TOP HOLE IN EACH STRIP (2 TOTAL)
 - CONCRETE, BRICK OR STUCCO: 3/16" x 1-3/4" MASONRY SCREW OR #8 x 1-1/4" SCREW WITH APPROPRIATE SIZE EXPANDING ANCHOR
-

INSTALLATION INSTRUCTIONS:

1- DETERMINE WHICH DIRECTION THE BOTTLE NECKS SHOULD POINT.


- 1.1. IF THE BOTTLE NECKS ARE TO POINT TO THE RIGHT, THE PUNT RACK MUST BE INSTALLED TO THE LEFT OF THE NECK RACK. SEE IMAGE BELOW FOR REFERENCE.
- 1.2. IF THE BOTTLE NECKS ARE TO POINT TO THE LEFT, THE PUNT RACK MUST BE INSTALLED TO THE RIGHT OF THE NECK RACK. SEE IMAGE BELOW FOR REFERENCE.

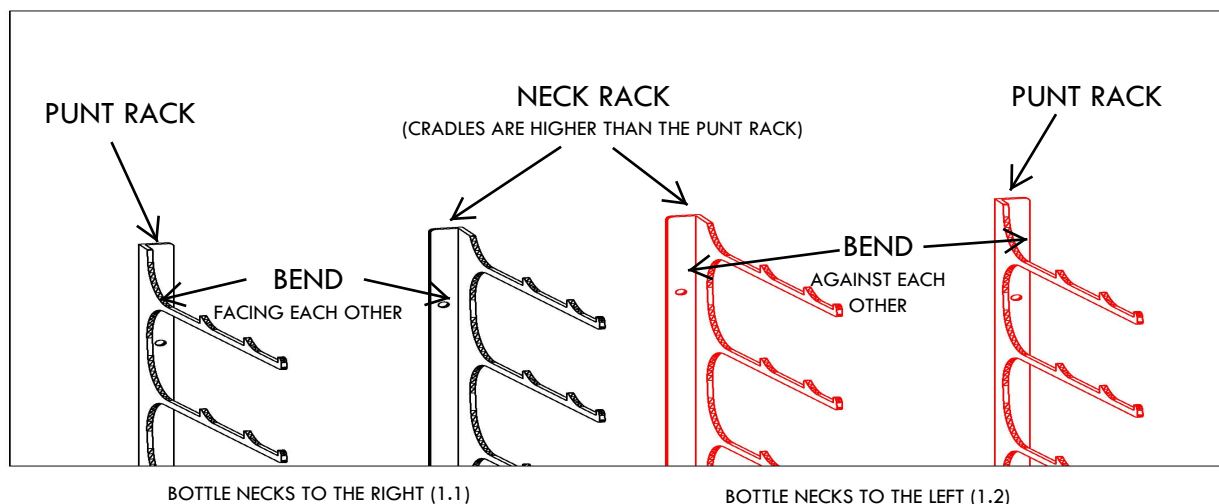

2 - LAYOUT THE WALL

- 2.1. THE CENTERLINE OF THE FIRST RACK (EITHER PUNT OR NECK) MUST BE AT LEAST 2-3/4" FROM ADJACENT WALLS OR OBSTRUCTIONS. THIS ALLOWS FOR THE BOTTLE TO OVERHANG THE RACK.
- 2.2. FROM THE CENTERLINE OF THE FIRST RACK, MEASURE 7 1/2" TO THE CENTERLINE OF THE NEXT RACK.
- 2.3. (FOR MULTIPLE COLUMNS) LOCATE THE CENTERLINE OF THE NEXT RACK 5 1/2" AWAY FROM THE PRIOR RACK".
- 2.4. (FOR MULTIPLE COLUMNS) CONTINUE DIMENSIONS ALTERNATING BETWEEN 7 1/2" (SET OF RACKS) AND 5 1/2" (FOR SPACE IN BETWEEN EACH SET OF RACKS).

MOUNTING HARDWARE NOT PROVIDED

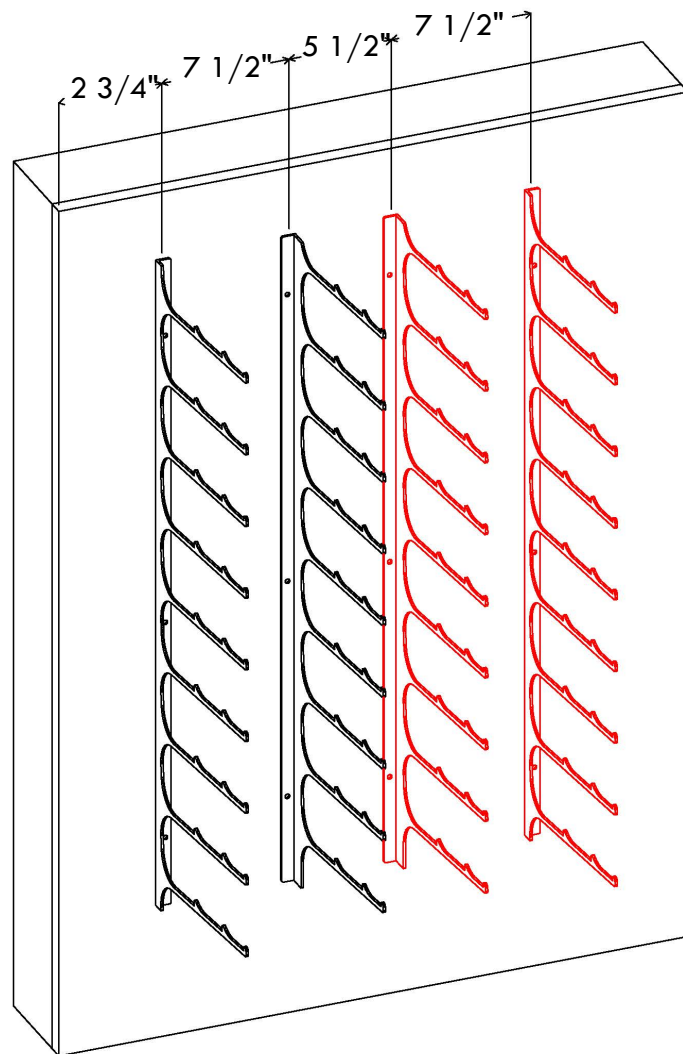

3 - DETERMINE APPROPRIATE FASTENERS FOR THE WALL SURFACE AND FASTEN THE RACKS TO THE WALL.

- 3.1. REFERENCE THE FASTENERS SECTION FOR RECOMMENDED FASTENER TYPES.
- 3.2. USING A LEVEL, ENSURE THAT EACH RACK IS PLUMB PRIOR TO SECURING IT TO THE WALL.
- 3.3. TOPS OF THE RACKS SHOULD BE EVEN
- 3.4. SECURE THE RACK TO THE WALL, USING THE APPROPRIATE FASTENERS, THROUGH THE PRE-DRILLED MOUNTING HOLES.

4 - STACKING RACKS (OPTIONAL)

- 4.1. POSITION THE RACKS DIRECTLY ABOVE OR BELOW EACH RACK. THE CURVE DETAIL SHOULD CONTINUE MAKING IT LOOK LIKE THE STACKED RACKS AS ONE.

