



REVUE

FLOOR TO CEILING BRACKET ASSEMBLY MANUAL

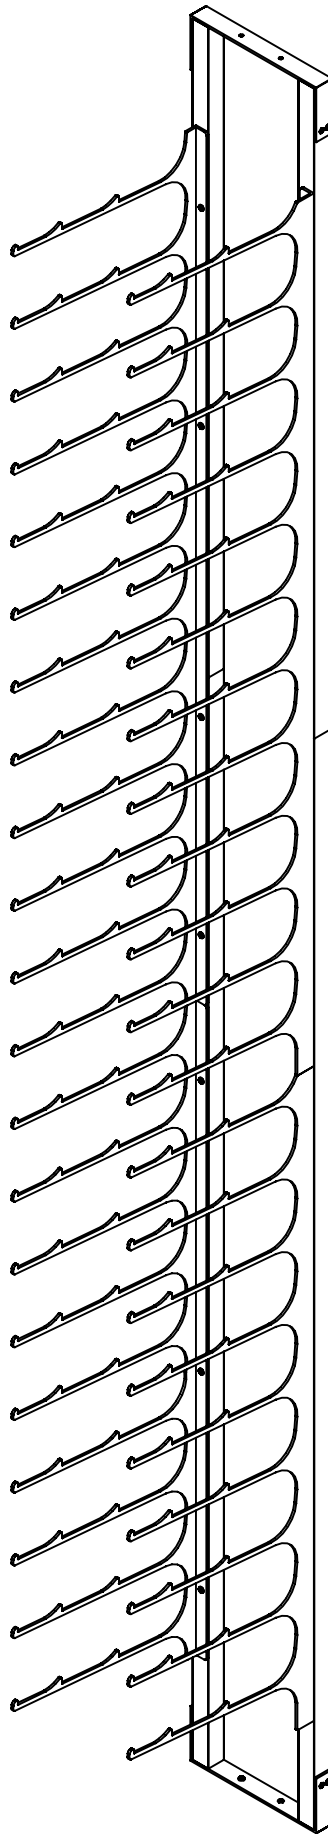

FLOOR TO CEILING

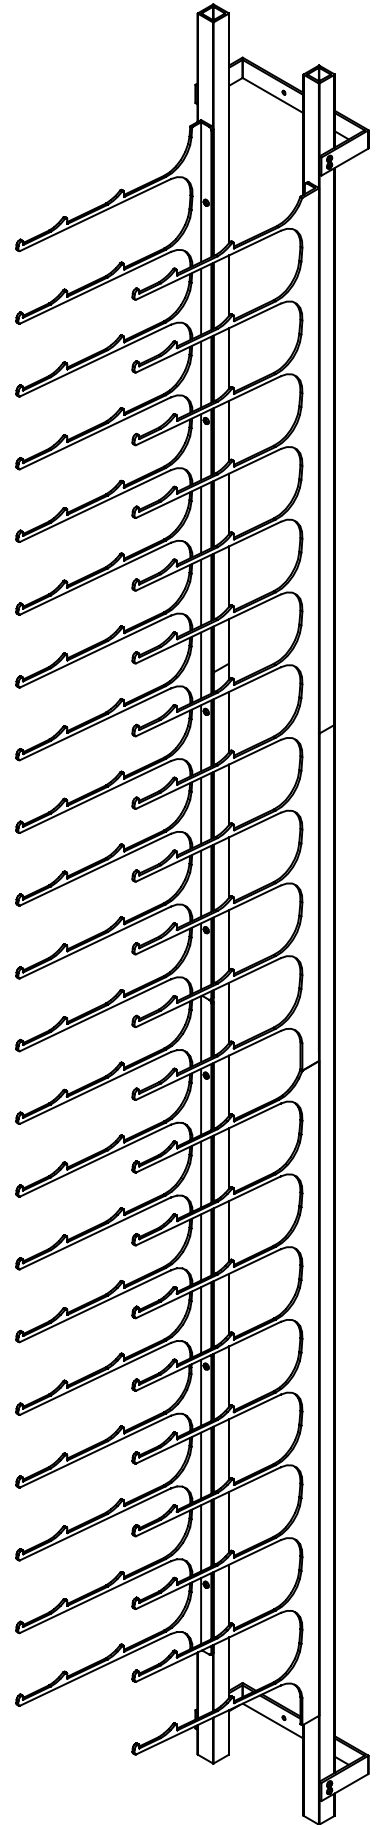


AGAINST THE WALL

WINE CELLAR INNOVATIONS
4575 EASTERN AVENUE
CINCINNATI, OHIO 45226
PHONE: (800) 229-9813
FAX: (513) 979-5280
WWW.WINECELLARINNOVATIONS.COM


PARTS LIST

#	QTY	DESCRIPTION
A	4	1" X 1" BRACKET – 60"
B	2	3/4" X 3/4" BRACKET – 24"
C	2	ANGLED BAR
D	16	SELF TAPPING SCREWS

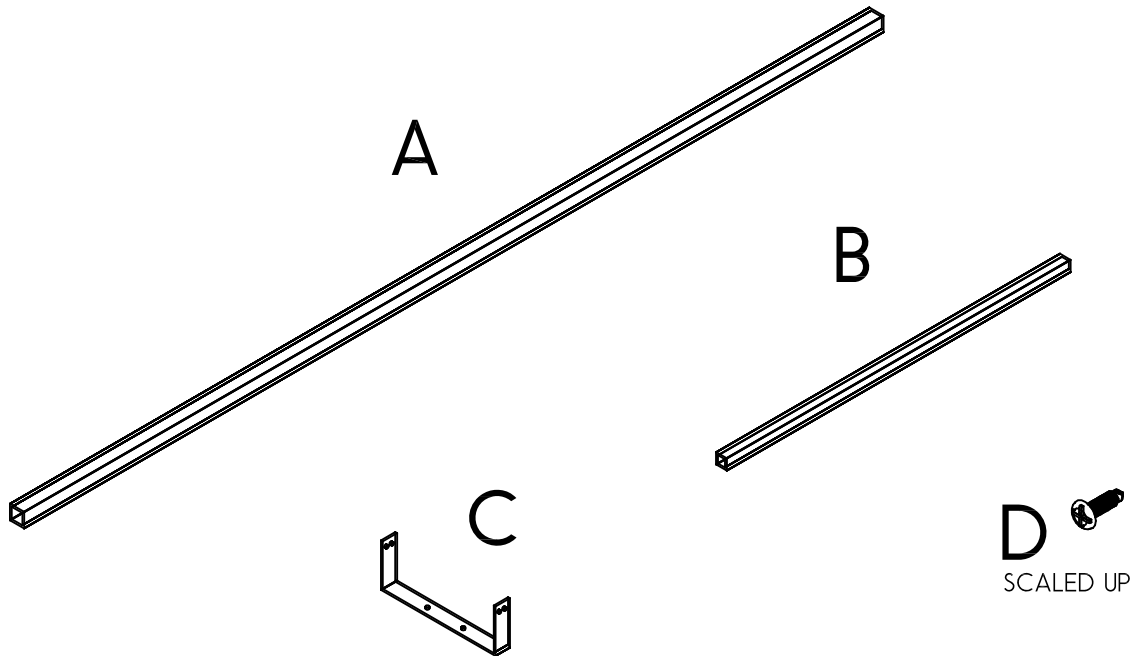


NOTE :
REVUE WINE RACK NOT INCLUDED IN PACKAGE


- ① PREPARE ONE 60" AND A 24" BRACKET. INSERT THE 24" HALFWAY THRU. THE EXTENDED PART SHOULD MEASURE 12". THE 60" BRACKET WILL ACT AS THE BOTTOM.

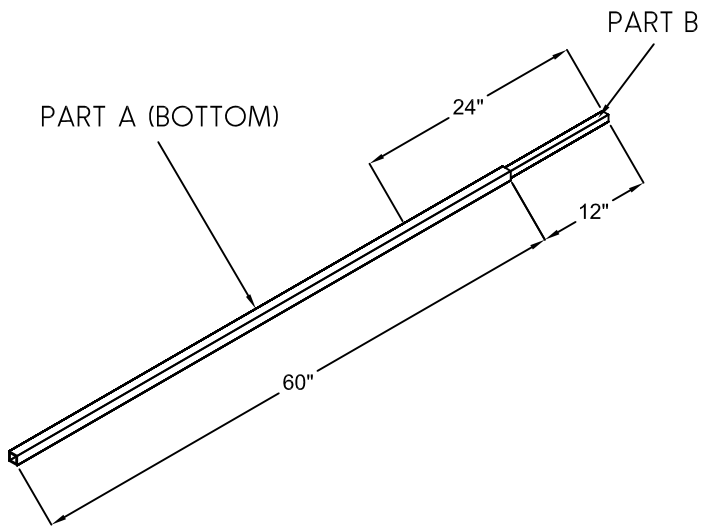


- ② LOCATE THESE DIMENSIONS AND DRILL THE SELF TAPPING SCREWS.

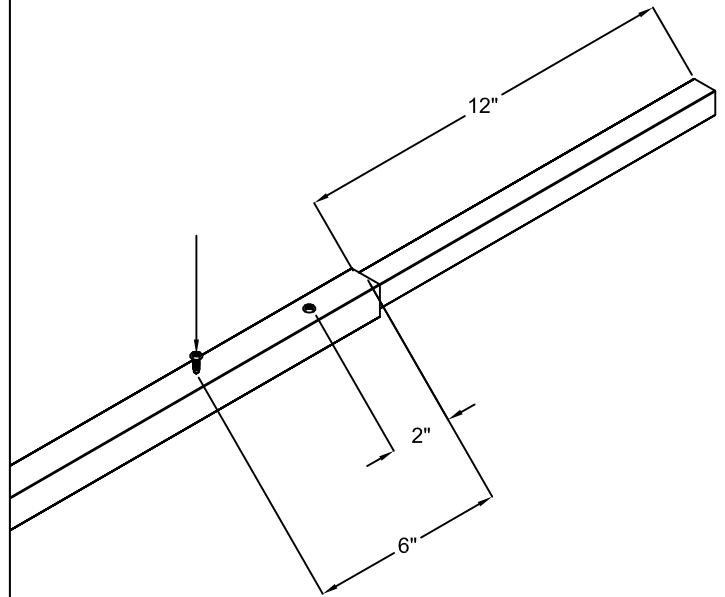


- ③ BEFORE CONNECTING THE OTHER END OF THE BRACKET, MAKE SURE TO GET THE EXACT CEILING HEIGHT ON WHERE TO BE INSTALLED. THEN CUT THE UPPER BRACKET TO THE DESIRED LENGTH.

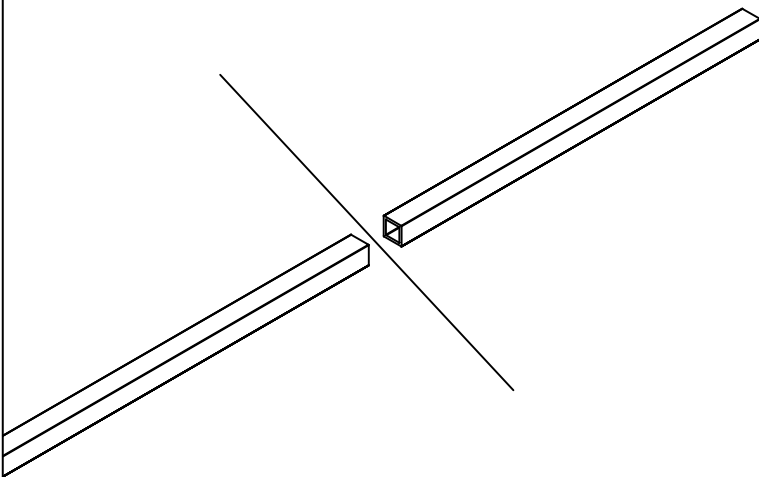


- ④ THEN INSERT THE UPPER BRACKET INTO THE LOWER BRACKET.

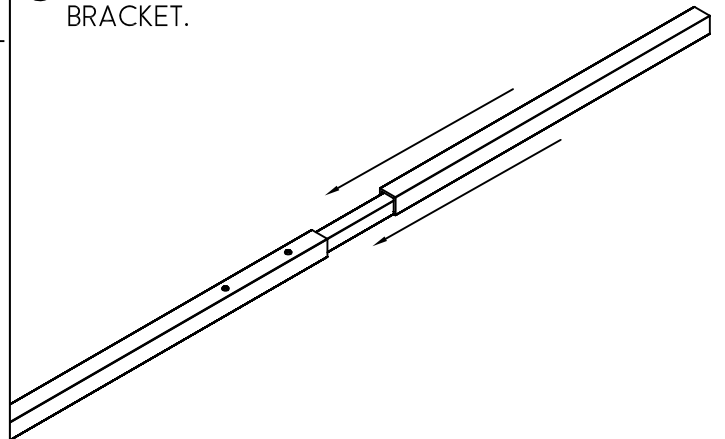

THEN USE THE SELF TAPPING SCREWS THE SAME WAY AS STEP 2.

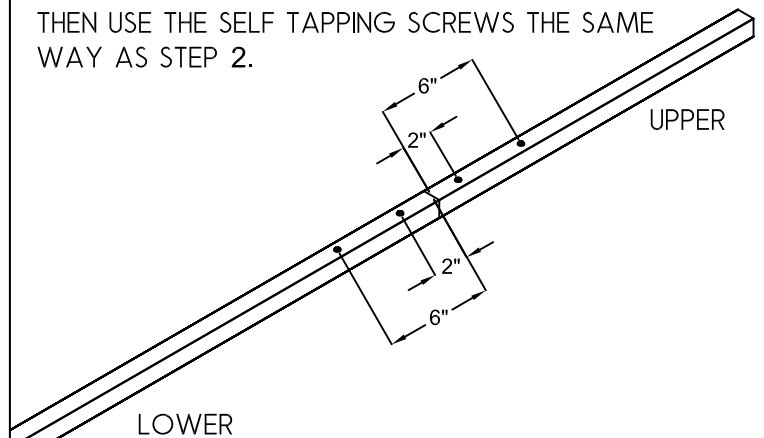


- ⑤ REPEAT STEPS 1 TO 4 FOR THE SECOND SET OF BRACKETS.




NOTE
SCREW HEAD MUST FACE AT THE BACK

- ⑥ IF USED FOR FLOOR TO CEILING, ATTACH THE ANGLED BRACKETS ON BOTH BOTTOM AND TOP. HOLES FOR SCREWS ALREADY PROVIDED. IF BRACKETS TO BE INSTALLED AGAINST THE WALL, PROCEED TO THE NEXT STEP.

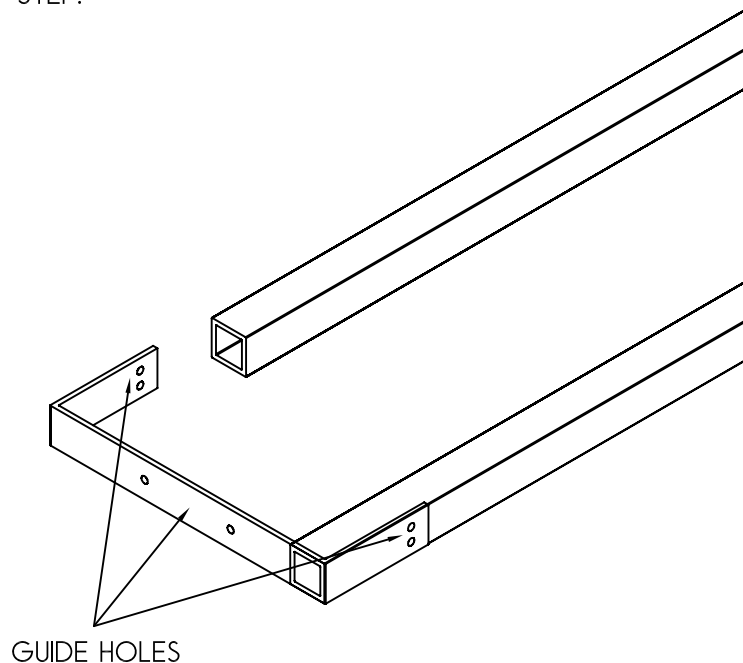

THEN REPEAT ABOVE FOR THE UPPER ANGELED BAR.

- ⑦ DO THIS STEP ONLY IF THE BRACKETS ARE INSTALLED AGAINST THE WALL, ELSE PROCEED TO THE NEXT STEP.

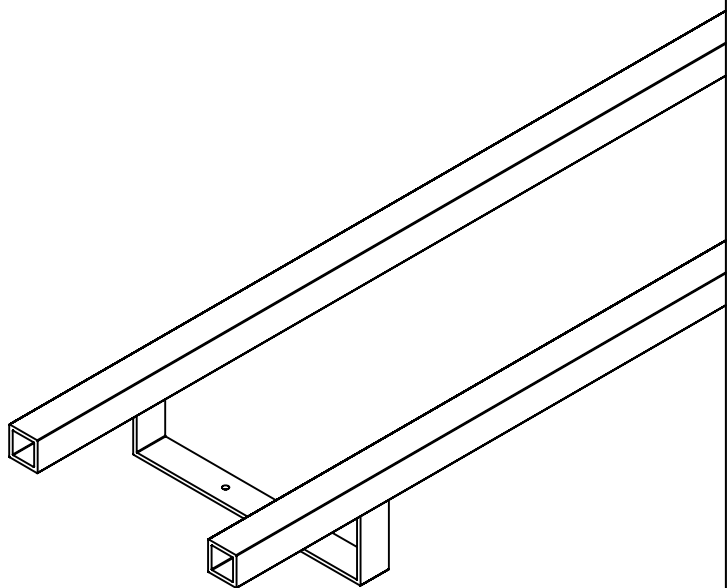

- ⑧ THEN SECURE THE ANGLED BAR TO THE FLOOR/CEILING OR TO THE WALL DEPENDING ON WHERE TO BE INSTALLED. THEN INSTALL THE SEPARATE REVUE RACKS. ENJOY AND RACK SHOULD BE COMPLETE.

