


**BACK
OPEN DIAMOND**

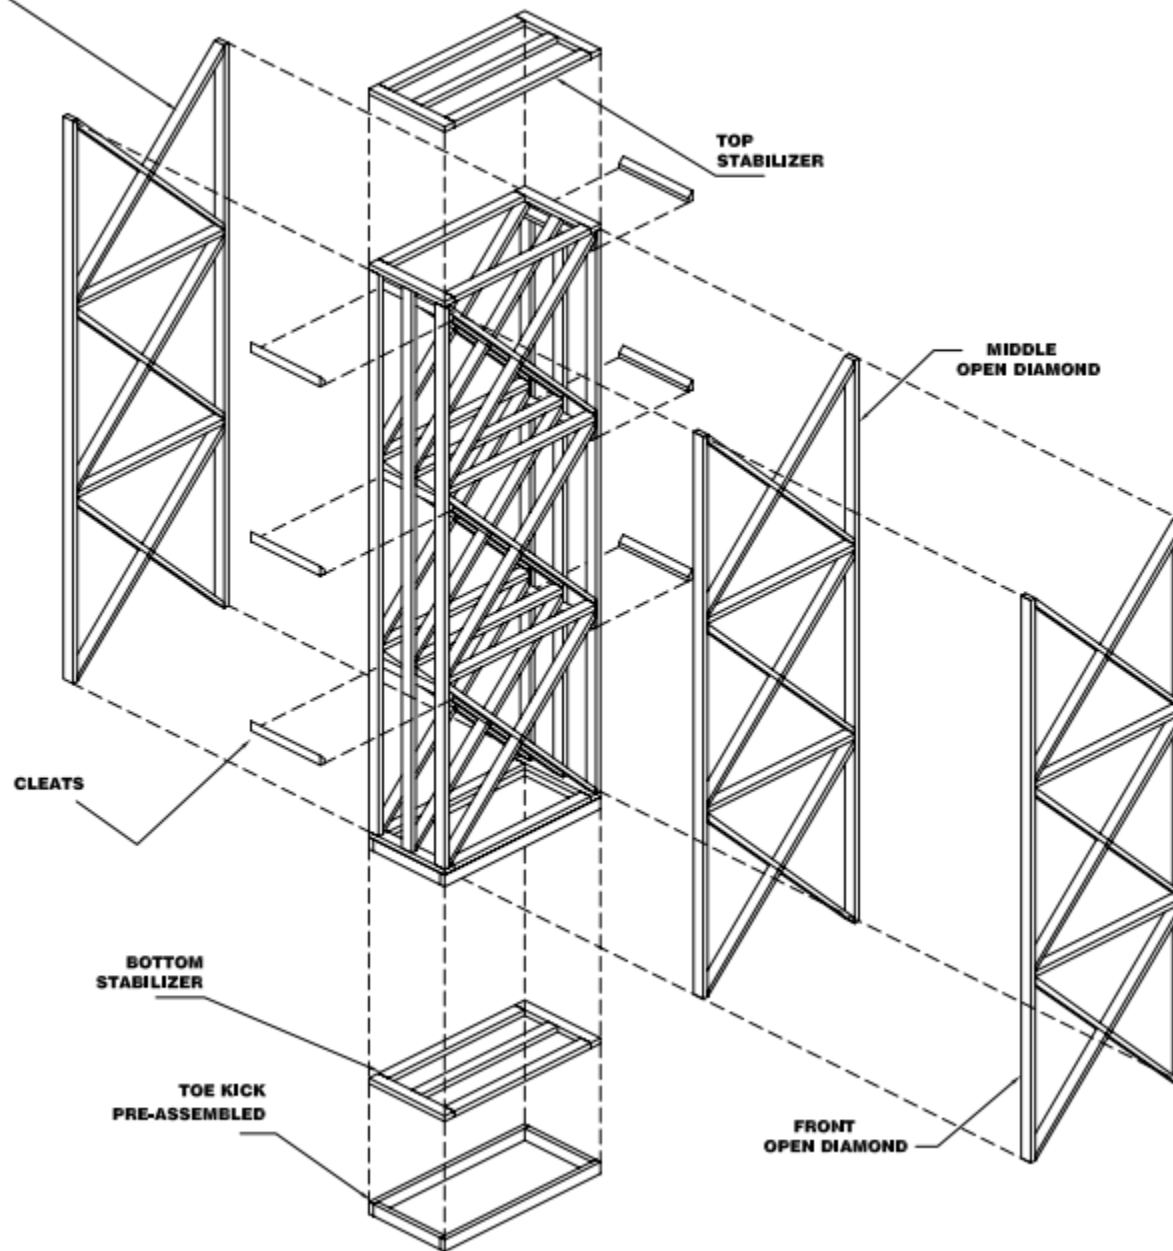

**TOP
STABILIZER**

**MIDDLE
OPEN DIAMOND**

CLEATS

**BOTTOM
STABILIZER**

**TOE KICK
PRE-ASSEMBLED**

**FRONT
OPEN DIAMOND**

Instructions:

1. Lay down the Back, Middle and Front Open Diamond.
2. Install slotted top & bottom stabilizers on ends of Open Diamond.
3. Install middle Open Diamonds
- 4.- Install Cleats
5. Position onto Toe Kick.
6. Fasten the rack to the wall.

Note:

Use finishing nails to install along with small amounts of wood glue. Drill holes or use a pneumatic nailer.

WINE RACK
Concepts