


# KIT CURVE CORNER ASSEMBLY INSTRUCTIONS

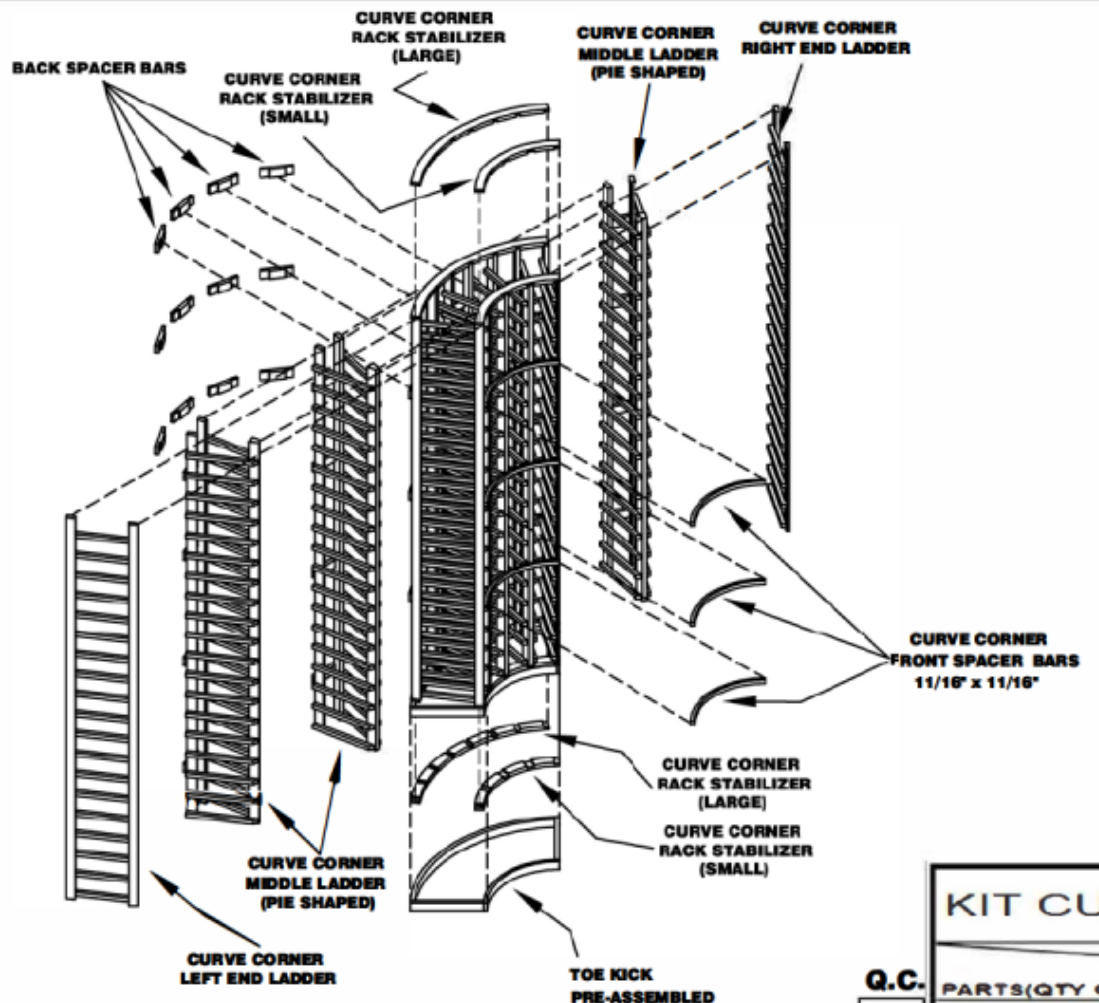

Note: **TOP VIEW**

Racking does not flush with Toe Kick.

## Instructions:

- 1.- Begin with an End Ladder an Middle (pie Shaped) Ladder.
- 2.- Install slotted bottom stabilizers (Front & Back) on the short end of ladder.
- 3.- Install middle ladders (Pie Shaped).
- 4.- Install slotted top stabilizers (Front & Back).
- 5.- Stand rack up and install back and front spacers bars.
- 6.- Position onto Toe Kick
- 7.- Fasten the rack to the wall.
- 8.- Install front trim (molding)

## Note:

Use finishing nails to install along with small amounts of wood glue. Drill holes or use a pneumatic nailer.

## KIT CURVE CORNER

		COLUMNS OF RACK	
<b>Q.C.</b>	<b>PARTS(QTY OF PIECES)</b>		<b>4</b>
	CURVE CORNER LEFT END LADDER		1
	CURVE CORNER MIDDLE LADDER		3
	CURVE CORNER RIGHT END LADDER		1
	CURVE CORNER RACK STABILIZER SMALL (TOP-BOTTOM)		2
	CURVE CORNER RACK STABILIZER LARGE (TOP-BOTTOM)		2
	CURVE CORNER SPACER BARS (11/16" x 1 1/2")		0
	CURVE CORNER SPACER BARS (11/16" x 11/16")		3
	BACK SPACER BARS		12
	TOE KICK		1
	SCREWS (3/16"X1 1/4")		57
	NAILS (1 3/16")		17